


TPO to be laid with adhesive to substrate and parapet prior to installation of Parapet Cap.

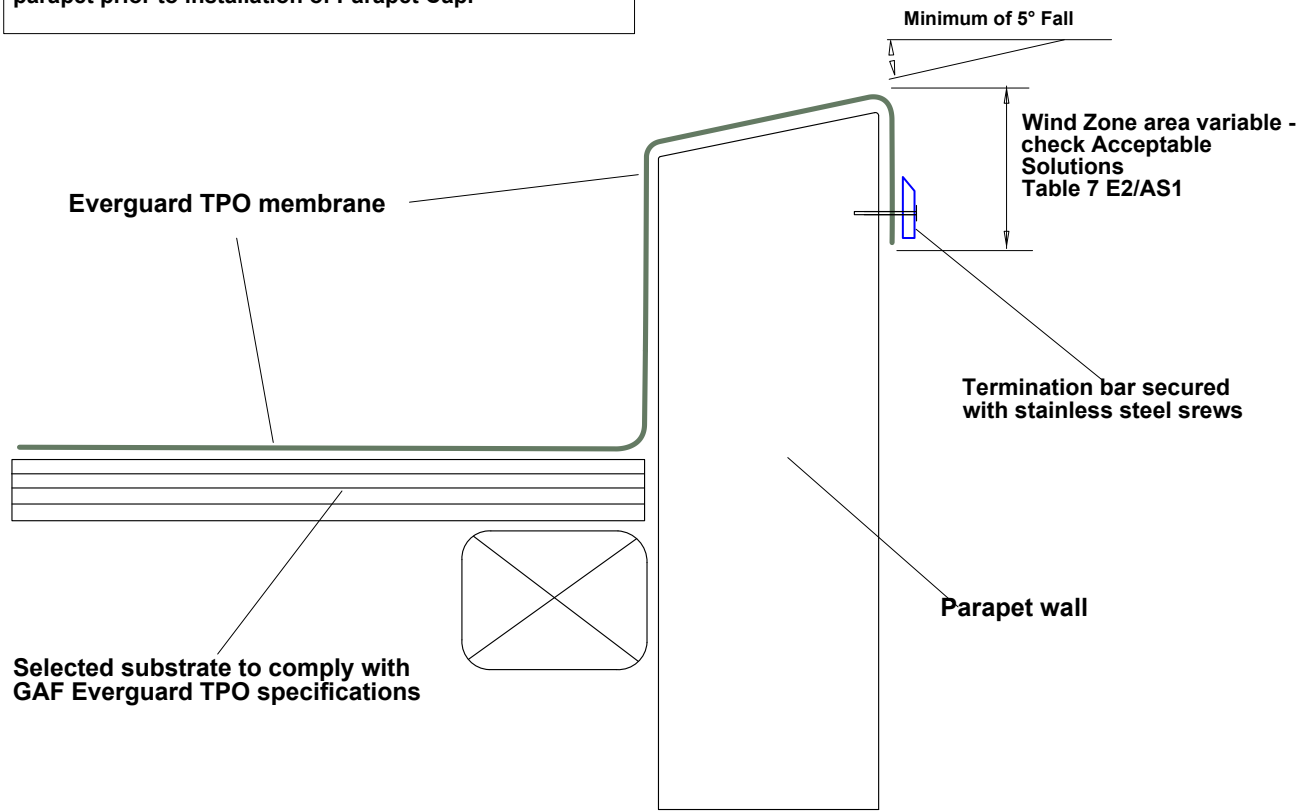

## PARAPET TERMINATION BAR

Scale: N.T.S.