


TPO to be laid with adhesive to substrate and parapet prior to installation of parapet cap.

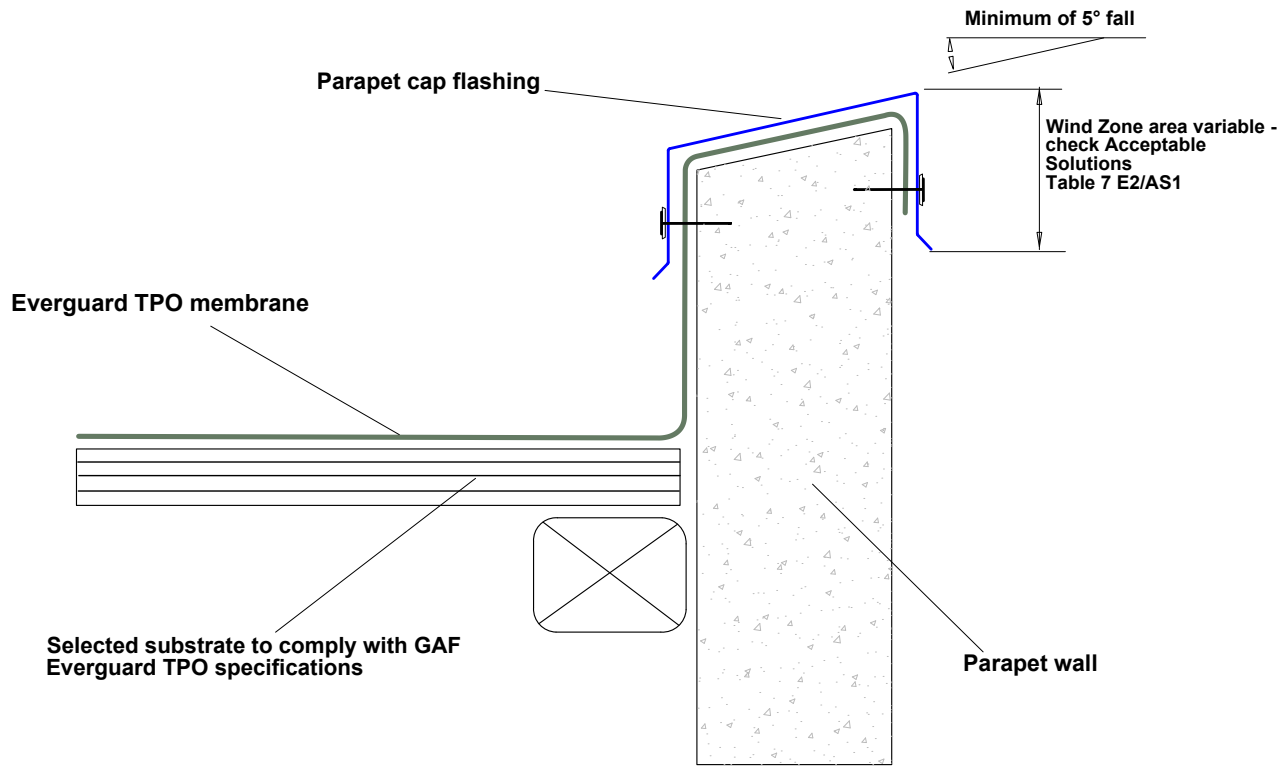

# PARAPET FLASHING

Scale: N.T.S.