


Cut appropriate size opening in underlay and substrate for vent.
Refer to included instructions

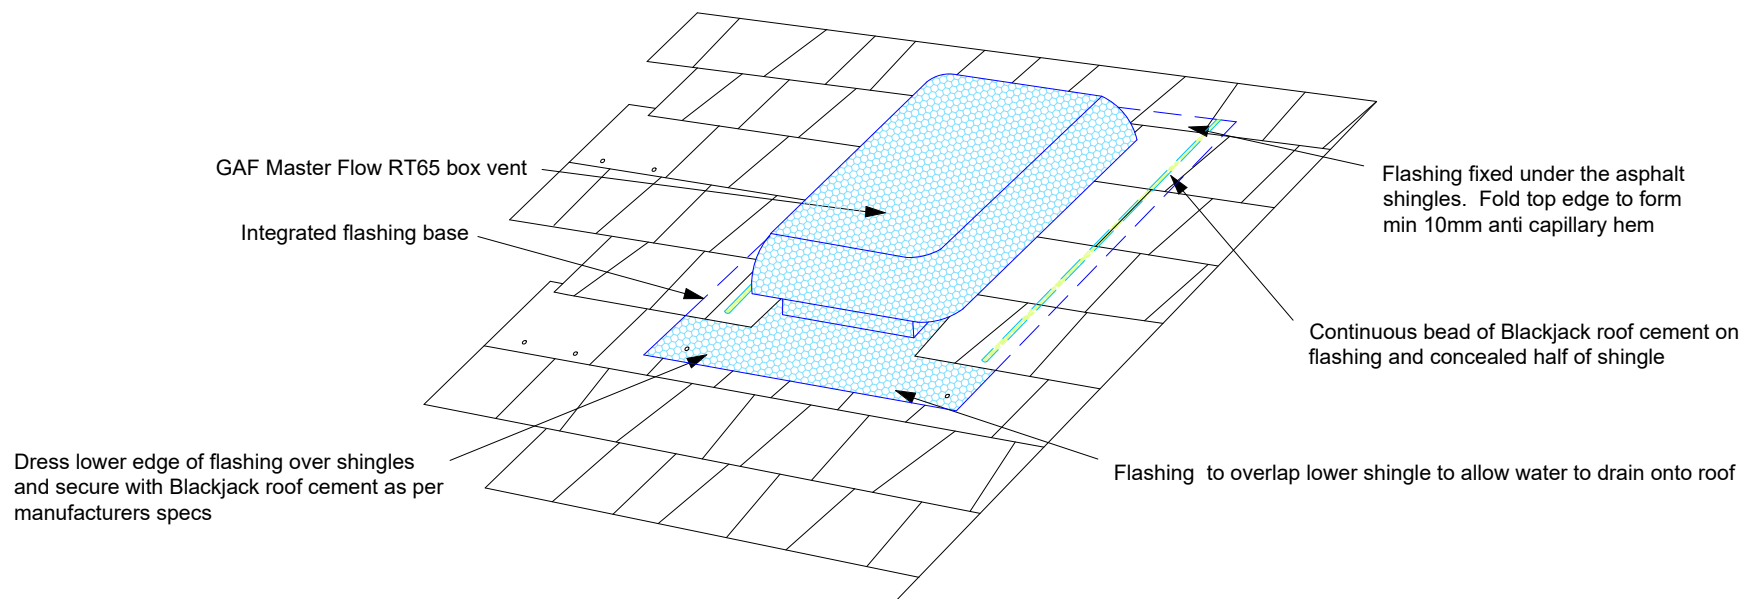

SHINGLE ROOF MASTER FLOW RT65 BOX VENT

Scale: N.T.S.

Notes:

Install WeatherWatch peal and stick 500mm x 500mm under box vent flashing, draining on to tiles below. Underlay should not block air flow from the vent.

Install one RT-65 box vent per 23.2 square meters of attic floor area.